



QUICK START GUIDE

EN-XGSFPP-OMAC-V2



Accessing the Web GUI :

Make sure the control interface and the SFP+ Stick are under the same VLAN.

The default IP of the stick is **192.168.11.1**, so the control computer IP should be set to 192.168.11.xxx.

The stick and the control computer IP should be under the same network For example: You can set the computer IP to 192.168.11.5


Check whether the network is connected : ping 192.168 .11.1 -t

1) Web GUI :

Enter the stick's IP into your web browser : 192.168.11.1

Username: **admin**


Password: **QsCg@7249#5281**

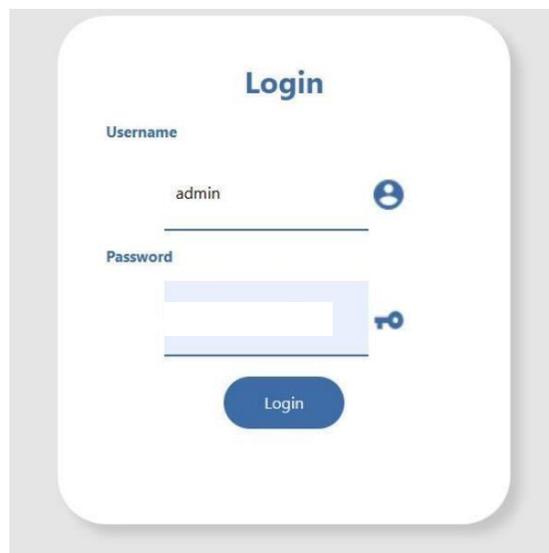



2) Enabling Telnet and SSH :

Select the **Service** tab > Enable Telnet/SSH and save.

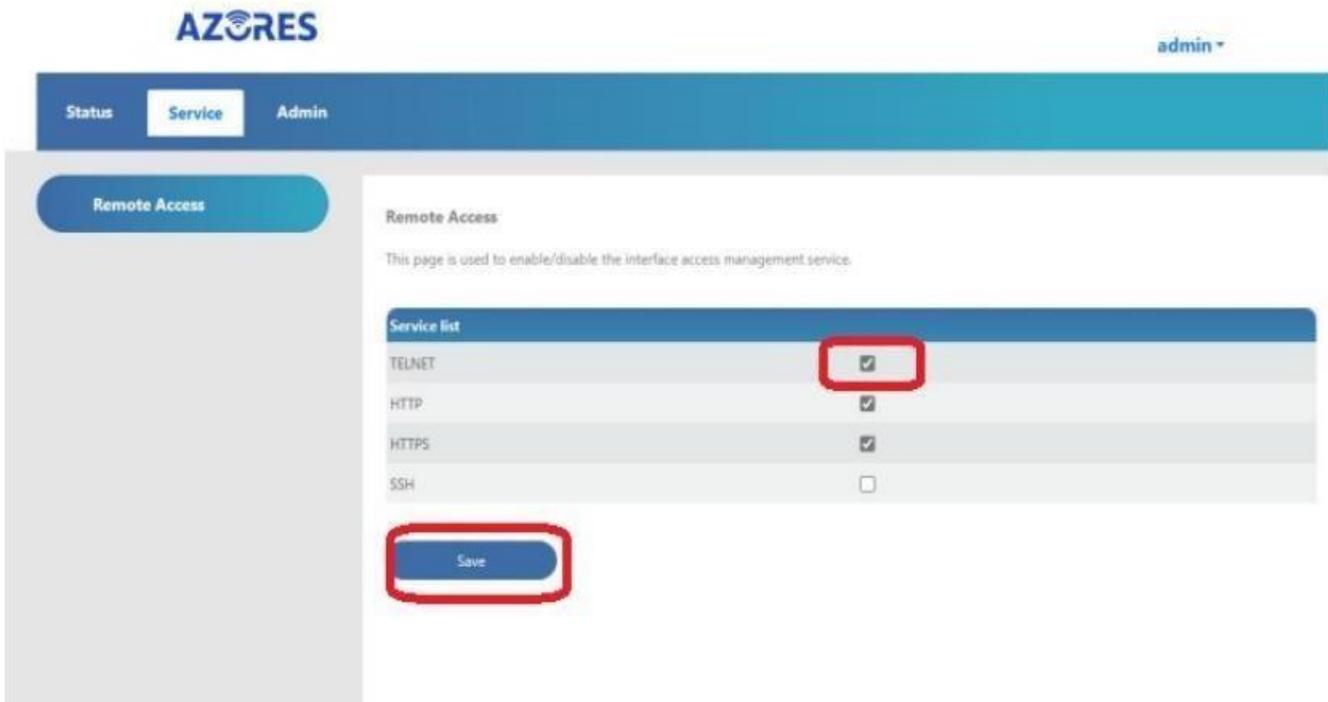

3) Entering Test Mode (Telnet) :

Input the following username and password :

Username (Telnet): **root**

Password (Telnet): **QpZm@4246#5753**

- Telnet login to the gateway
- Send the command "**load_cli factory**"
- You are now in test mode

If successful, the command will return "**config/factorydir #**"